

Atlanta Stove

Using a drill put 22 evenly spaced holes around the can using a 5/64 drill bit at ¼ of an inch from the bottom of the can.

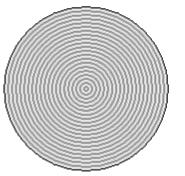

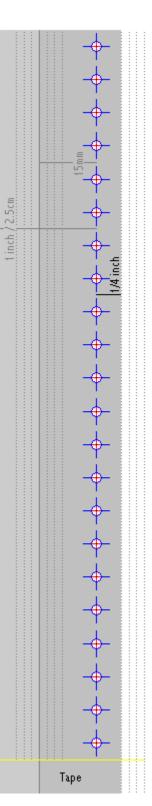







http://zenstoves.net